

Parts

QTY	Part Description
1	Set of Cabinet Doors (or singles for 18" wide cabinets)
2	Handles
4	Mounting Plates
4	Hinges

Preparation

Office cabinetry doors install in the same manner as doors for closet shelving towers.

For base units, the cabinets are delivered pre-assembled, with the doors attached. For ease of installation, you may wish to remove the doors while the cabinet is installed in its final position. (Hinges may be separated by squeezing the release button on the end of the hinge arm.) Under these circumstances, you may only need to re-fasten the door to complete installation, connecting the two halves of the hinge assembly (Fig. 1).

For base and tall cabinets, the cabinet door hinge locations are pre-drilled, so use of the door template is not necessary. Hinge plates mount into the front row of system holes.

Wall cabinets are the same depth as closet towers, so you will need the template for upper cabinets.

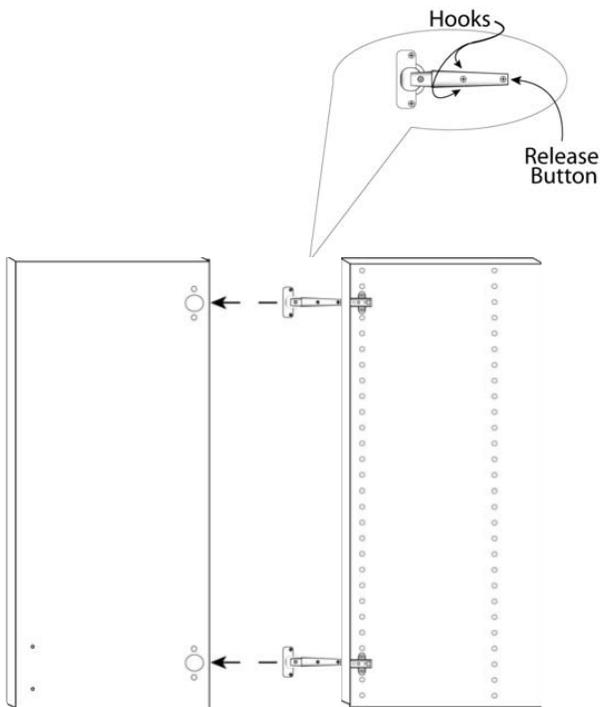


Fig. 1

Installation

1. Assemble the cabinet to which you plan to attach the cabinet doors if it's not pre-assembled.
2. Insert each hinge into a set of three (3) holes on the back of each door, then turn the fastening screws one quarter turn clockwise (as shown with arrows on the hinge) to tighten in place. (See Fig. 1.)
3. Attach the hinge plates to each side partition by fastening the pre-mounted screws into the holes.
4. Ensure the arrow next to the empty screw hole is pointed towards the door. (See Fig. 2.)

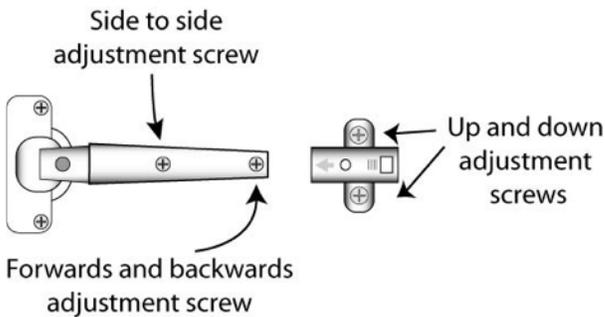


Fig. 2

5. To fasten the hinge to the hinge plate, hold the door with hinges attached so that the hooks on the back of each hinge latch onto the front, leading edge of the mounted plate (where the arrow is). Squeeze the two hinge pieces until they snap together (see Fig. 2 close up).
6. Attach middle hinges for full length doors, if necessary.
7. Gently close the door against the unit.

8. Attach any handles to the doors using #8 × 1¼" screws, and/or attach door bumpers, if necessary.

* Door faces may be adjusted up and down by loosening the hinge plate's fixing screws and sliding the door up and down then tightening the fixing screws again. The width of the gap between the doors may be adjusted by tightening or loosening the adjustment screw on the front of the hinge arm. (See Fig. 2)